

FUN4803 SCARECROW ANIMATRONIC

ASSEMBLY INSTRUCTIONS. THIS ITEM IS NOT A TOY. 14+

Parts List:

Arms, Leg Poles (4), Base, Plug, Step-Pad, Waist Ring, Head, Neck Cover, Hat, Pants, Plaid Shirt, Brown Shirt, Shoulder Frame, Chest/Module, Ropes.



- Once assembled and plugged-in, Scarecrow will have audio, light-up eyes and moving head
- Item works with or without step-pad.
- When power switch is ON, Scarecrow is activated by sound sensor.
- To activate by step-pad, set power to OFF.
- Knob on module adjusts volume.

STEP 1:

- Lay base on floor, large section forward, pegs up.
- Connect leg poles (2 on each side)
- Add pants

