

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN96668 Magmoor the Lava Demon



Please follow the step by step guide and enjoy your Magmoor the Lava Demon!

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
4. Keep all away from the adapter, as it heats up during operation.

PARTS LIST

- A. Base x 1
 - B. Poles x 2
 - C. Hooves x 2
 - D. Upper Poles x 2
 - E. Costume x 1
 - F. Body Frame x 1
 - G. Left Arm x 1
 - H. Right Arm x 1
 - I. Left Hand x 1
 - J. Right Hand x 1
 - K. Head with Fog Hose Adapter x 1
 - L. Tail Support x 1
 - M. Upper Tail x 1
 - N. Lower Tail x 1
 - O. Fog Machine Adapter
 - P. Adapter (Included)
- Input: 100 - 240V AC 50/60Hz
Output: 5.9V 2.0A



BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE AT CUSTOMERSERVICE@SVICHINA.COM

Assembly Instructions:

1

2

3

STEP 1

Note: Throughout the instructions, left and right are relative to the character. Connect both the (B) Poles to the (A) Base using the available quick connect push buttons and pre-drilled hole as shown in Figure 1. Slide both (C) Hooves onto the (B) Poles and let them rest on the (A) Base as shown in Figure 2. Insert both (D) Upper Poles to the (B) Poles using the available quick connect push buttons and pre-drilled holes as shown in Figure 3.

1

2

STEP 2

Slip the (E) Costume over the (D) Upper Poles as shown in Figure 1. Connect the (F) Body Frame to the (D) Upper using the available quick connect push button and pre-drilled holes as shown in Figure 2.

OPTIONAL: If you choose to use the Step Activation Pad, plug the connector into the input receiving jack marked "TRY ME" on the Function Control Box and set the Step pad in front of the character when ready to display.

Note: Do not plug the Power Adapter into power outlet until item assembly is completed.




STEP 3

Bring the (E) Costume up over the (F) Body Frame as shown in Figure 1. Slide the (G) Left Arm up the left sleeve of the (E) Costume as shown in Figure 2, and set the forked hook of the (G) Left Arm into the forked hook housing available on the top left side of the (F) Body Frame as shown in Figure 3.



STEP 4

Remove the cotter pin off from the forked hook of the (I) Left Hand as shown in Figure 1.a then slide the forked hook of the (I) Left Hand into the housing available at the end of the (G) Left Arm as shown in Figure 1.b, Slide the cotter pin back into the forked hook of the (I) Left Hand as show in Figure 1.c. Connect the available cable on both the (I) Left Hand and the (G) Left Arm as shown in Figure 2. Secure in place the left sleeve of the (E) Costume to the (I) Left Hand by using the available hook and loop closure as shown in Figure 3. Slide the (H) Right Arm up the right sleeve of the (E) Costume as shown in Figure 4.

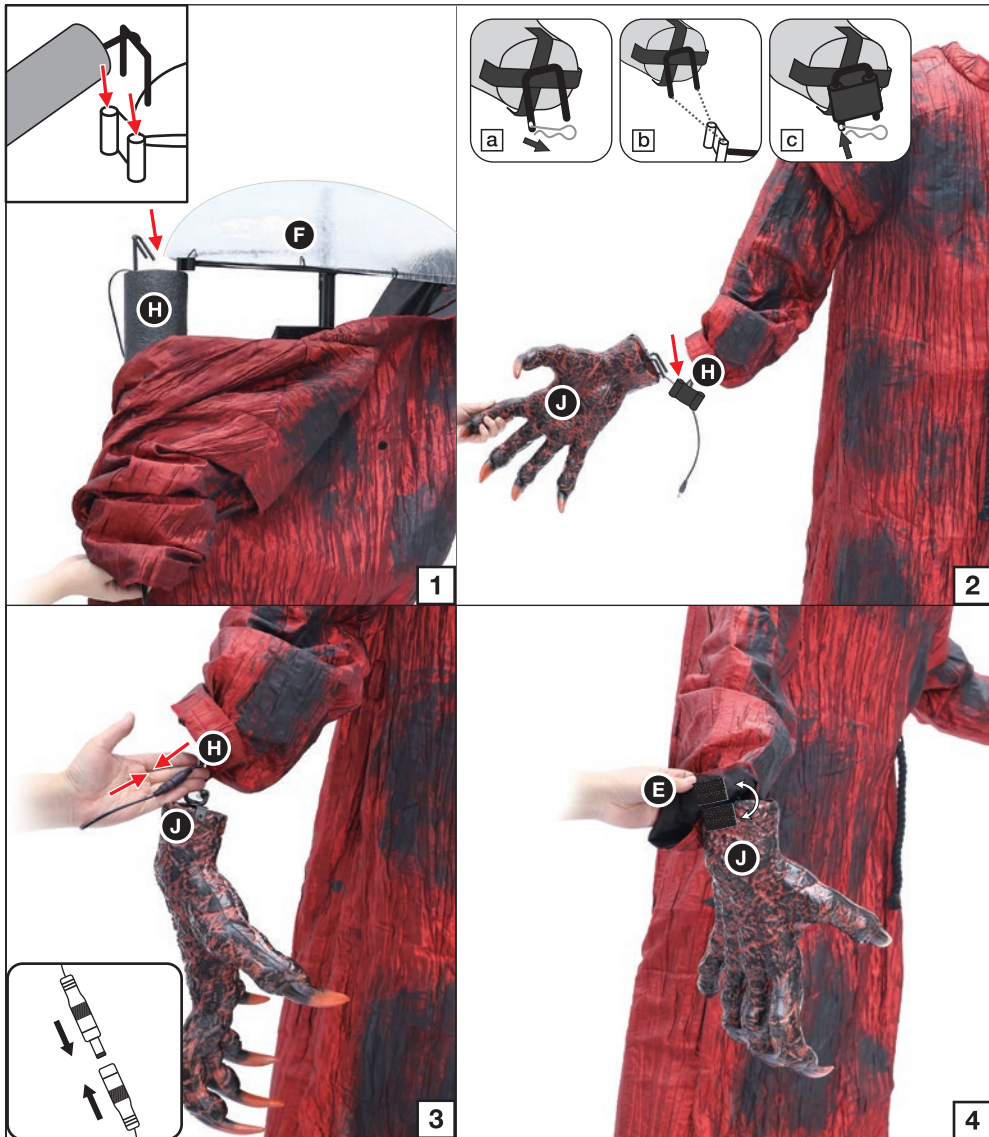


STEP 5

Slide the forked hook of the (H) Right Arm into the housing available on the top right side of the (F) Body Frame as shown in Figure 1. Remove the cotter pin off from the forked hook of the (J) Right Hand as shown in Figure 2.a then slide the forked hook of the (J) Right Hand into the housing available at the end of the (H) Right Arm as shown in Figure 2.b, Slide the cotter pin back into the forked hook of the (J) Right Hand as show in Figure 2.c. Connect the available cable on both the (J) Right Hand and the (H) Right Arm as shown in Figure 3. Then secure right sleeve of the (E) Costume to the (J) Right Hand by using the available hook and loop closure as shown in Figure 4.



STEP 6

Thread the fog hose adapter available from the (K) Head from the top of the (F) Body Frame and in between hip hoop all the way down the bottom of the (E) Costume as shown in Figure 1 and slide the forked hook of the (K) Head into the housing available at the top of the (F) Body Frame as shown in Figure 2. Connect all cables from the Function Control Box to their corresponding cables by color and shape as shown in Figure 3. Secure the sensor to the slot on the (E) Costume by using the available hook and loop closure as shown in Figure 4.

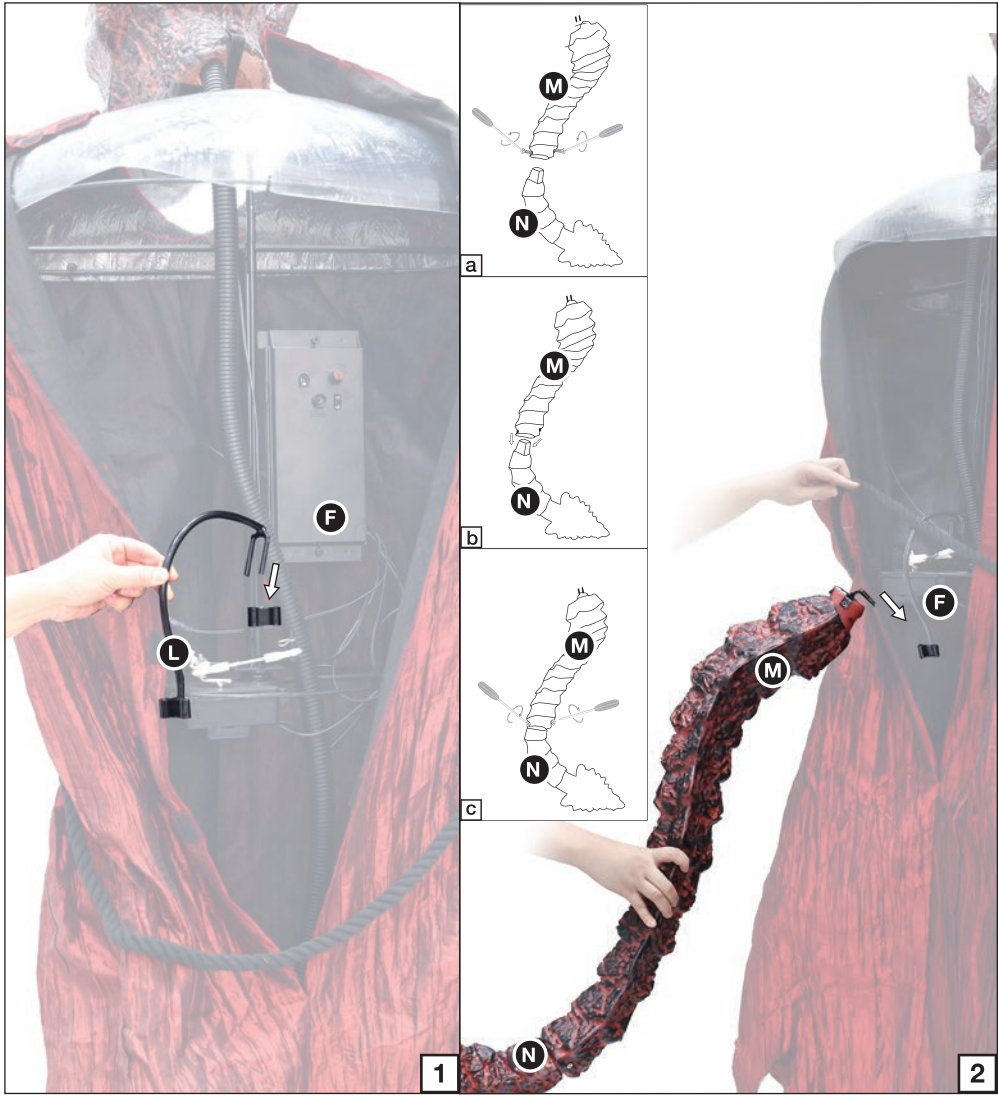


STEP 7
Slide the forked hook of the (L) Tail Support into the housing available just below the Function Control box of the (F) Body Frame as shown in Figure 1. Assemble the tail, by unscrewing the screws on the (M) Upper Tail as shown in Figure 2.a. Connect the (N) Lower Tail to the (M) Upper Tail as shown in Figure 2.b, and replaced both screws back to the (M) Upper Tail as shown in Figure 2.c.




STEP 8
Close the back of the (E) Costume using the available hook and loop closures as shown in Figure 1. And tie the rope together available from the (E) Costume as shown in Figure 2.



STEP 9
Your Magmoor the Lava Demon is now complete! Plug in and turn on to let the fun begin!

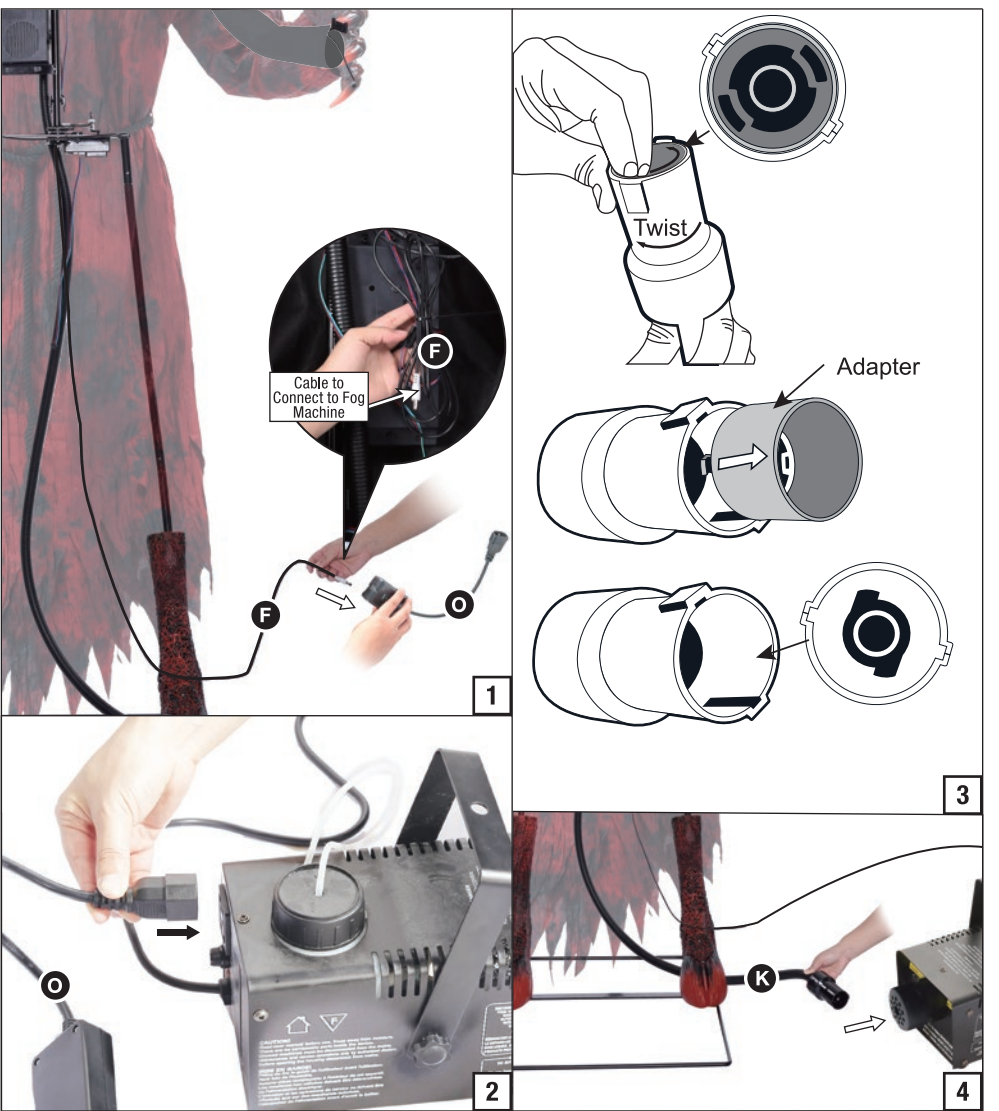

STEP 10
This item can also connect to an optional fog machine (sold separately). Thread the cable located on the Function Control Box down through the (E) Costume and attach to the (O) Fog Machine Adapter as shown in Figure 1. Then plug the (O) Fog Machine Adapter into the fog machine as shown in Figure 2. If the connection on the hose is slightly too small to fit the nozzle on your machine, try removing the preinserted inner adapter ring. Grip the outside of the connector firmly in one hand, while with the other, press and twist counter-clockwise from the inside. Once loosened, the inner ring should slide out easily, and the hose should now fit onto the nozzle. Attach the Fog Hose located from (K) Head to the fog machine as shown in Figure 4.

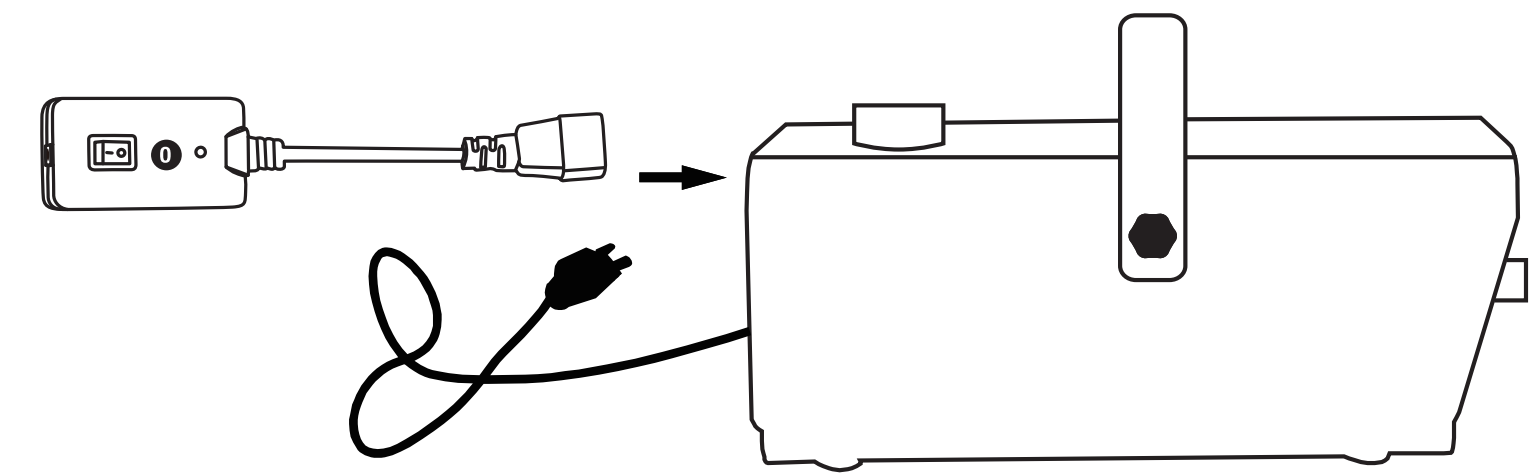

FOG MACHINE ADAPTER INSTRUCTION:

- Use the Fog Machine Adapter only with SVI 1000 Watt Fog Machine (Not Included).
- Connect the 3-prong plug of the Fog Machine Adapter into the jack at the back of the Fog Machine.
- Connect the power cord of the Fog Machine into a power outlet.
- Turn the power switch of the Fog Machine to the “ON” position.
- After the Fog Machine warms up (approx. 5 minutes), the light on the Fog Machine Adapter will turn on.
- Press the “ON” switch, The fog machine will be ready to produce fog.
- Press the “OFF” switch, the fog machine will produce fog only when the prop is activated.
- Be sure to follow all safety precautions included with the Fog Machine during operation.

IMPORTANT SAFETY INSTRUCTIONS

Read Fog Machine instructions located in Fog Machine seperated carton before operating.
Open the package and check for obvious damage during shipping. If found, discontinue use and contact the distributor.

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (F) Body Frame, as desired.

2. Settings:

Sensor /Détecteur	This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for one activity cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
○	OFF/TRY ME - This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The item will operate for one activity cycle with each Try Me activation.
I	ON - This switch mode will continually operate the lights, sound, and animation of the item.
⌚	VOLUME - Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help. Seasonal Visions International, Berkeley, CA 94710, CUSTOMERSERVICE@SVICHINA.COM

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS

DANGER! TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

Read and follow all instructions that are on the product or provided with the product. For a cord-connected or direct plug-in power unit, do not use an extension cord. Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of electric shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult qualified electrician.

