

PEEKABOO PENNY ANIMATRONIC™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.
ESTIMATED ASSEMBLY TIME: 4 MINUTES.


PARTS

1.



1. BASE

2.

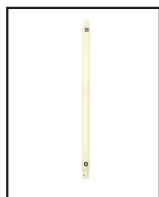

2. POLE

3.



3. BODY & MODULE

4.




4. HEAD

5.




5. 6V 2A DC ADAPTOR

ASSEMBLY

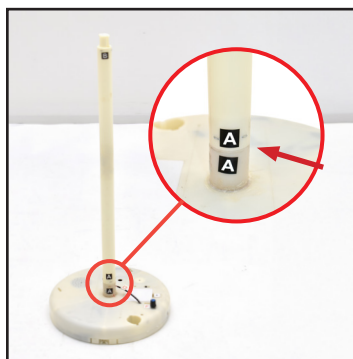

1. Insert and snap lock the POLE into the BASE.


(Match A to A)

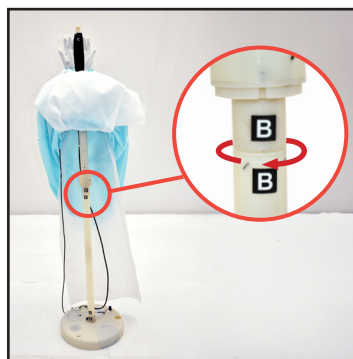

2. Lift the BODY & MODULE'S fabric. Insert and twist lock the BODY & MODULE to the POLE.
(Match B to B)




3. Push and hold the circular locking pin on the bottom of the HEAD. Insert the BODY & MODULE into the HEAD and release the circular locking pin to secure it.
(Match C to C)

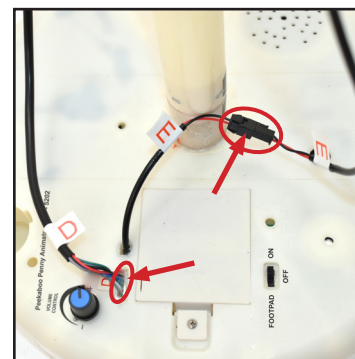


4. Connect the wires located on the BASE.
(Match D to D - Pop-up Movement)
Connect the wire located on the BODY to the base.
(Match E to E - Motion Sensor)

OPTIONAL ARMS DISASSEMBLY

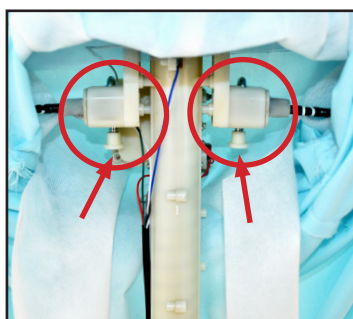


1. Lift the back of the BODY fabric. Press the circular locking pin located at the base of the left arm to unsecure the left arm pole from the MODULE. Repeat this with the right arm.

OPERATING INSTRUCTIONS

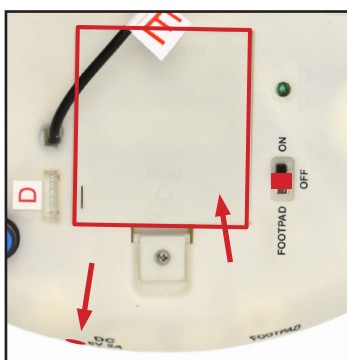

1. Insert 4 AA batteries (not included) into the battery compartment located on the BASE.
OR
Insert the 6V 2A DC ADAPTER (included) into the BASE.

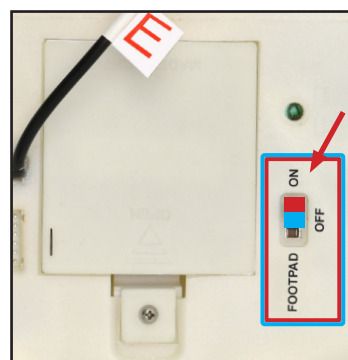

2. Move the switch located on the BASE to the ON position (marked in red). Move in front of the item to activate it. Move the switch to the OFF position (marked in blue) when item is not in use.


OPTIONAL FOOTPAD SETUP

OPTIONAL FOOTPAD SETUP


FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack located to the right of the power switch.
2. Place the power switch to the FOOTPAD position to enable demo activation.
3. Step on the footpad to activate the scary sequence!

* Footpads are sold separately and can be purchased at www.tekkyaccessories.com.

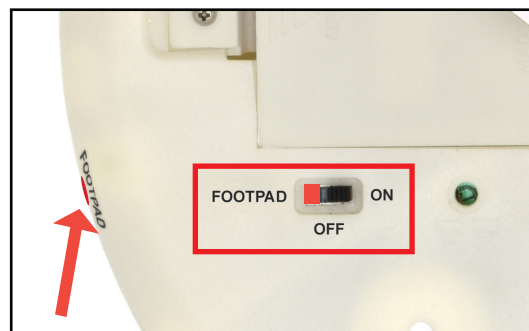

Battery Diagram

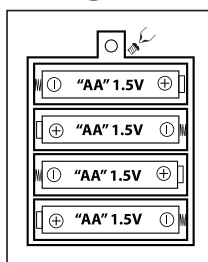

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use.

Use only batteries recommended in the instructions.

Do not mix new and used batteries.

Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.

Be mindful to insert batteries with the correct polarity (+/-) as indicated.

Remove all exhausted batteries.

Rechargeable batteries are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the item before being charged.

Non-rechargeable batteries are not to be recharged.

The supply terminals are not to be short-circuited.

Always dispose of exhausted batteries properly.

Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING!
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION UNLESS ON METAL BASE.



Visit us at tekkydesign.com

Requires 4 AA batteries
(not included) or
6V 2A DC adapter (included).

ALL NEW MATERIAL ONLY:
METAL, PLASTIC, FABRIC,
POLYPROPYLENE FOAM,
POLYESTER WADDING.
Surface washable only.

Peekaboo Penny Animatronic™
is a trademark of Tekky.
Copyright ©2014 Tekky.
All Rights Reserved.
FUN97030

MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to
www.tekkydesign.com for assistance.



SMART PHONE SCAN
SETUP VIDEO

