

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN97155 Clown Go Round



Please follow the step by step guide and enjoy your Clown Go Round!

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
4. Keep all away from the adapter, as it heats up during operation.

PARTS LIST


- A. Base x 1
- B. Support Poles x 2
- C. Support Pole with Housing x 1
- D. Support Pole with Function Box x 1
- E. Clown-1 x 1
- F. Clown-2 x 1
- G. Clown-3 x 1
- H. Canopy Frames x 3
- I. Support Pole with Canopy x 1
- J. Adapter x 1

Input: 100 - 240VAC 50/60Hz
Output: 5.9V 2.0A




BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE AT CUSTOMERSERVICE@SVICHINA.COM

Assembly Instructions:

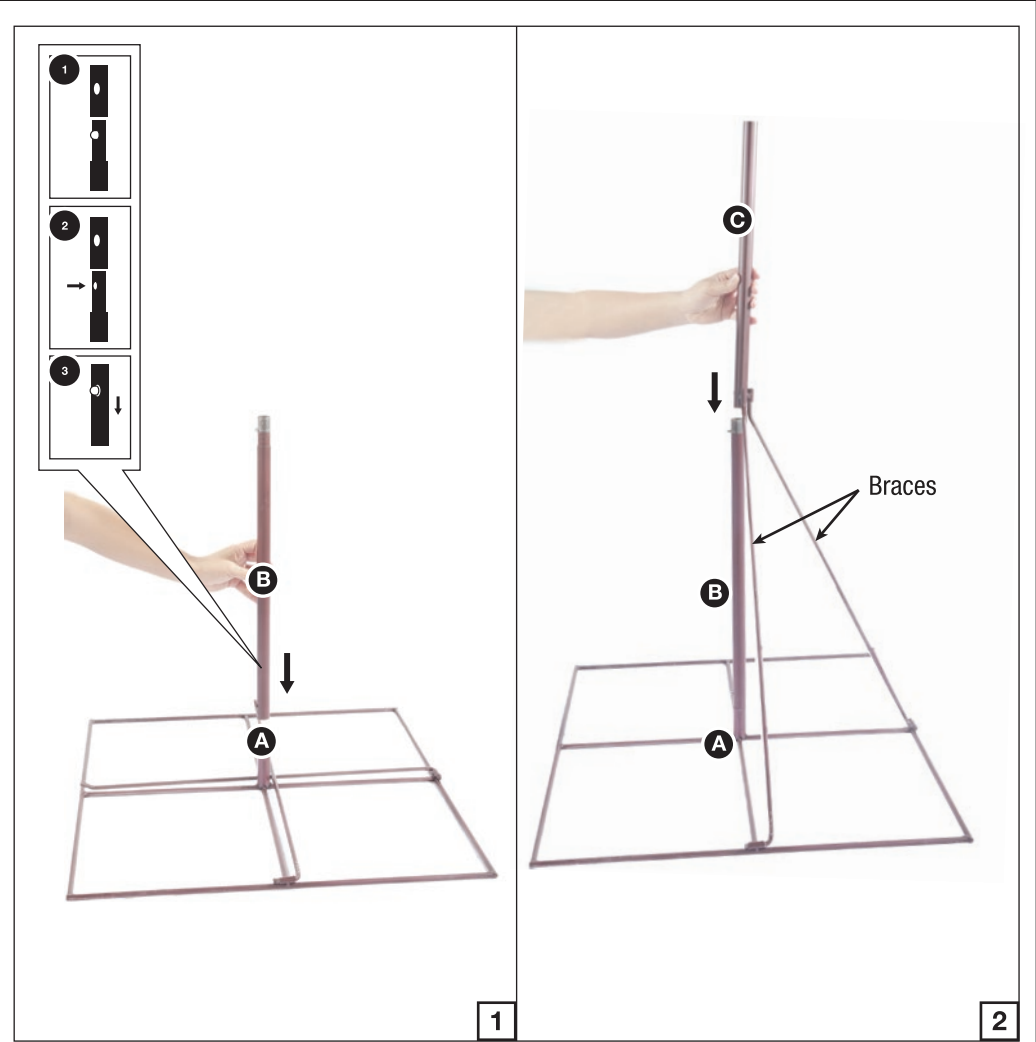

STEP 1

Attach the (B) Support Pole to the (A) Base by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 1. Set the braces located on the (A) Base into the slots housings located on the (C) Support Pole with Housing. Assemble the (C) Support Pole with Housing to the (B) Support Pole by aligning the quick-connect push button into the pre-drilled as shown in Figure 2.

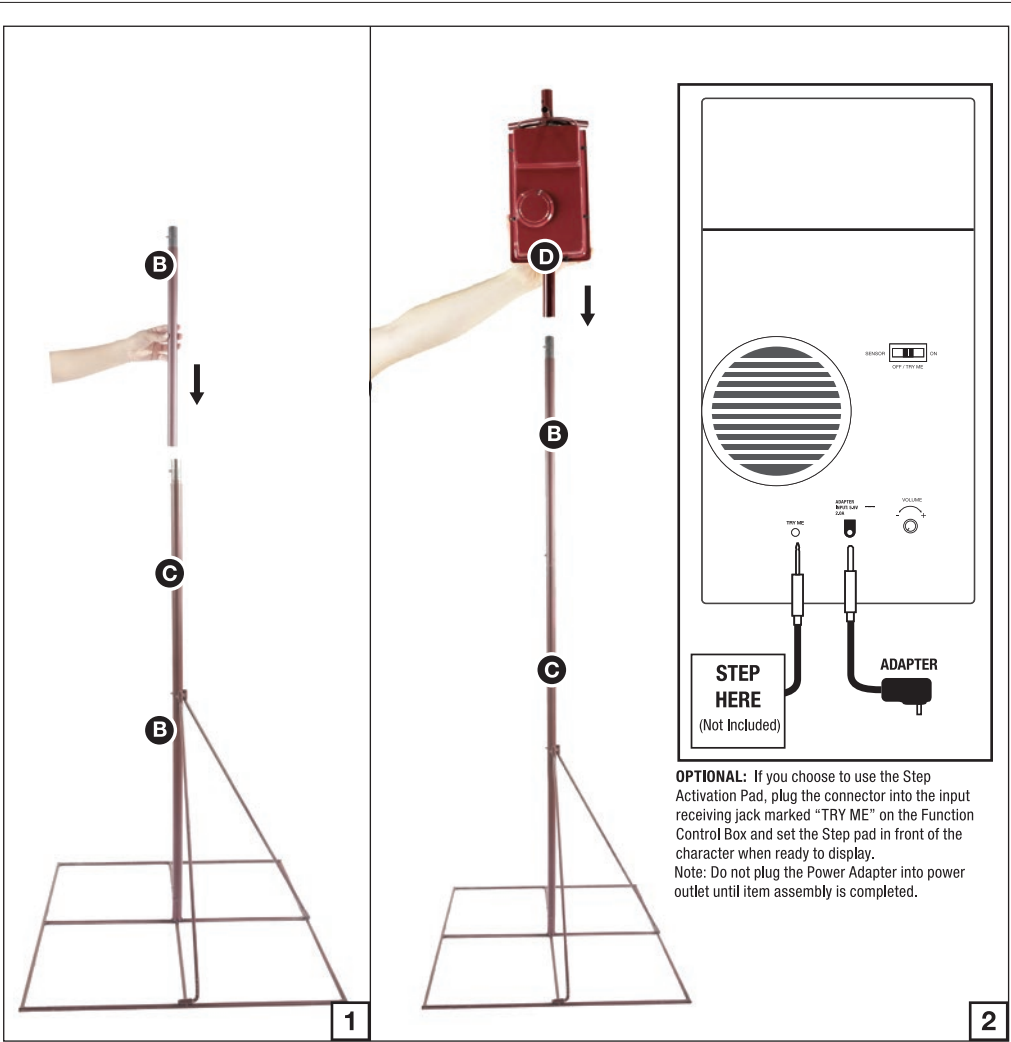


STEP 2

Attach the other (B) Support Pole to the (C) Support Pole with Housing by aligning the quick-connect-push button into the pre-drilled hole as shown in Figure 1. Assemble the (D) Support Pole with Function Box to the upper (B) Support Pole as shown in Figure 2. Now, plug the Adapter into the input receiving jack marked "DC 5.9V" on the Function Control Box. Note: Do not plug the Power Adapter into power outlet until item assembly is completed.



STEP 3
 Assemble (E) Clown-1 to the (D) Support Pole with Function Box by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 1.
 Assemble (F) Clown-2 to the (D) Support Pole with Function Box by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 2.

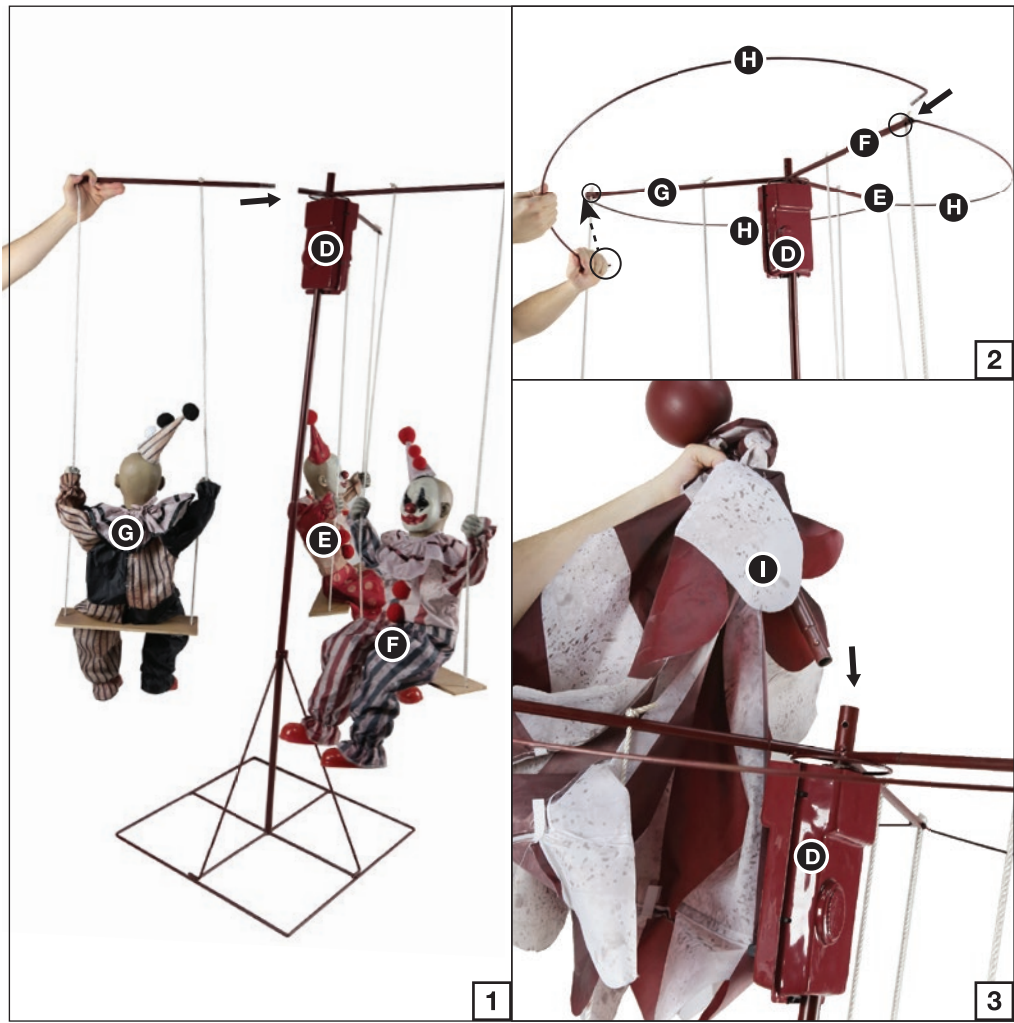

STEP 4
 Assemble (G) Clown-3 to the (D) Support Pole with Function Box by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 1.
 Note: The clowns do not have to be arranged in any specific order and can be arranged to preference. Attach the (H) Canopy Frames to the slot housings located on the poles from (E) Clown-1, (F) Clown-2 and (G) Clown-3 as shown in Figure 2.
 Attach the (I) Support Pole with Canopy to the (D) Support Pole with Function Box by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 3.



STEP 5
 Secure the (I) Support Pole with Canopy around the (H) Canopy Frames with the hook & loop closures as shown in Figure 1.
 Now, Your Clown Go-Round is now fully assembled. Plug in and turn on to let the fun begin!

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (D) Motorbox, as desired.

2. Settings:

SENSOR	This switch mode will activate sound and animation when the sound sensor is activated and will operate for one activity cycle with each activation.
OFF/TRY ME	This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The item will operate for one activity cycle with each Try Me activation.
ON	This switch mode will continually operate the sound and animation of the item.
	VOLUME - Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help. Seasonal Visions International, Berkeley, CA 94710, CUSTOMERSERVICE@SVICHINA.COM

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS

DANGER! TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

Read and follow all instructions that are on the product or provided with the product. For a cord-connected or direct plug-in power unit, do not use an extension cord. Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of electric shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult qualified electrician.

